


QC's, hoses & jugs
same on "M", "TC"
& "SC".

6 inches of #18 should
be left hanging in housing
when updating to the
jug QC system. Order
#19 & #20.

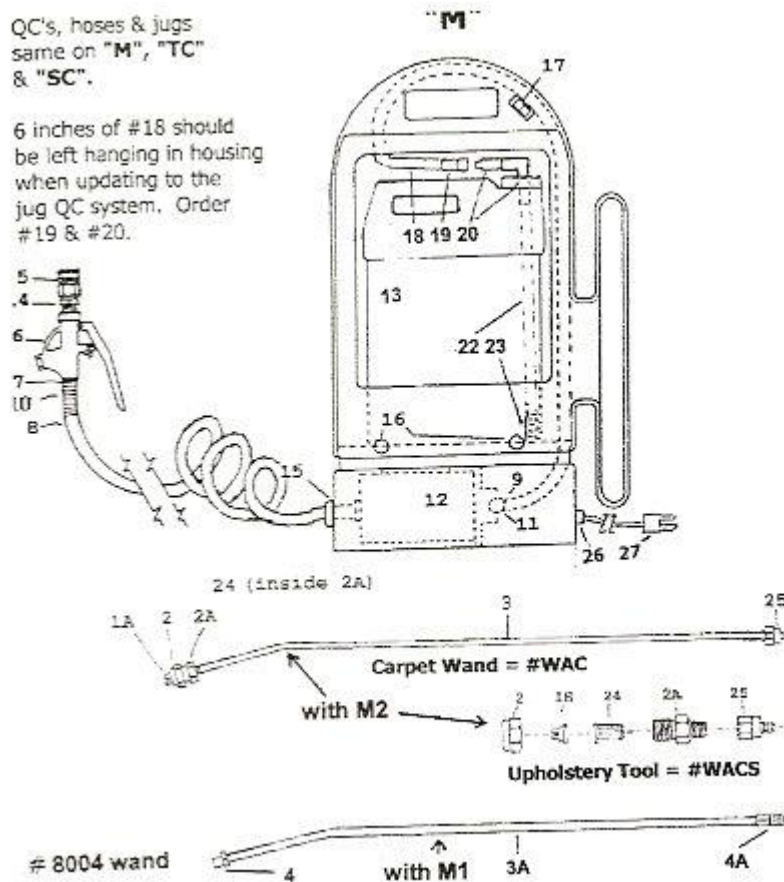

• **ALL MODELS NOW SHIPPED
WITH COIL HOSE**

• M1 has carpet wand. M2 has carp.
& uphol. wands on QC's.

• Parts #5 and #14 on M2 model
only.

• The 3M AP1 All Purpose Sprayer
is the same as the M2.

**Please Scroll Down to view Part
Numbers, Descriptions**

#	PART #	DESCRIPTION
	WAC	Complete carpet wand for M2, TC2 and SC2 8004 T-jet
	WACS	Complete upholstery tool for M2, TC2 and SC2 - 50015 T-jet
	8004WAND	Complete carpet wand for M1, TC1 and SC1 8004 V-jet

#20, 22, 23	CAP/DIP	Complete jug cap and dip tube including strainer
----------------	---------	--

To upgrade to jug qc system: buy #F17004LG & M22004LG, cut suction tube
13 inches up from strainer, push #F17004LG into tube hanging in sprayer,
push tube with strainer onto the barb under #M22004LG.

1A	TPU8004SS	Stainless Steel TJET carpet tip (brass tip #TPU8004 is)
1B	TPU50015	Brass TJET upholstery tip
2	CP1325	Brass hex nut
2A	CP1335	Brass body holding strainer (for carpet wand) (1/8 female)
2A'	CP1336	Brass body holding strainer (for upholstery wand) (1/8 male)
3&3A	SS20	Stainless steel tube threaded
4	H1/8DT- SS8004	Female SS V-JET tip, 8004(#H1/8DT-8004 - brass is)
4A	AB110CA	Brass connector 1/8" female/1/4" male to trigger

5	BST-1YSS	Stainless Steel Female QC(viton) Brass Female QC
6	6590	Br/SS Trig/valve
*	6590-ORING	Trig/Valve O RING ONLY (viton)
7	H142MUSBR	Compression & Strain relief
8	FW-10	Coil Spray Hose 1/4" I.D.(or) includes #H142MUSBR
8	801-4-10	<u>Straight</u> Spray Hose 1/4" I.D. includes hose barb, spring guard & clamp
9	SNP-2	Snap Clamp
11	N4MEB6	Nylon Elbow, 3/8 NPT
12	AQ115	Aquatec Motor/Pump # 5882-8F71-B584, 115 V, 70 psi
13	2G	2 Gallon Solution Container/w 43 mm opening (shipping can increase jug cost substantially)
14	216P-4-2	Brass Reduce Nipple
15	11375	Rubber Hose Grommet
16	ARD*	Nylon Base Plate Ret. Pin(4)
17	160011E	ON/OFF Switch
18	UR33	Urethane Hose, 33", 1/4" I.D., Pump to #19. Old # was 801-4-46
*	9600K35	Cap/Grommet(on suction hose)Old Design
19	F17004LG	Female QC with check valve, will not drip
20	M22004LG	Male QC with check valve (inc. cap & panel mount, not dip tube) (Male QC only # M22, without cap and panel mount,)
22	UR12.5	12.5", 1/4" I.D. urethane tube
23	13862-50	Suction Hose Strainer
24	4193A-10-50SS	Strainer check valve inside brass body (#2A-#CP1336)
25	BST-N1SS	Male QC, stainless steel. (brass is #BST-N1) brass on #WACS, SS on #WAC
26	M3251	Pigtail Cord Restrainer (start 2015)
27	18110	Power cord 20'
Cart	2000-227-43	2 Wheel Cart for M, TC and SC Models
Aquatec Pump Parts		#UHA-115 Black Pump Head for "M", 115 volt
		#UHA-12 Black Pump Head for "TC & SC", 12 volt
	#VHA	Valve Assembly - (same for 115 & 12 volt)
	#LHA	Diaphragm/CAM - (same for 115 & 12 volt)

If Aquatec pump runs but does not spray, replace #VHA & #LHA. If Aquatec pump leaks from small triangle on black pump head (#UHA), replace #UHA. Always spray fresh water after use of diluted solvents and at the end of the day.

M1 wand parts: #8004WAND

H1/8DT-SS8004 is female V-Jet Tip, SS20- is threaded 20 inch SS tube,
AB110CA-is 1/8/1/4 brass connector

M2 wand parts: #WAC #WACS

WAC
(carpet wand)

BST-N1SS-(male QC-brass available #BST-N1), threaded 20 inch SS tube-\$
CP1335-(brass body), 4193-A-10-50SS-(50 mesh strainer with 10 lb. check
valve), TPU8004SS-(SS T-Jet tip), CP1325-(Brass hex nut).

WACS (uphols. tool)

BST-N1-(Brass male QC), CP1336-(brass male body), 4193-A-20-50-(50
mesh strainer with 20 lb. check valve), TPU50015-(BrassT-Jet tip), CP1325-
(brass hex nut)